Home Decorators

Collection

HDC# 08049 MFG# TW-18417IY
SOUTHPORT CONSOLE TABLE 30"Hx47"W x15"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

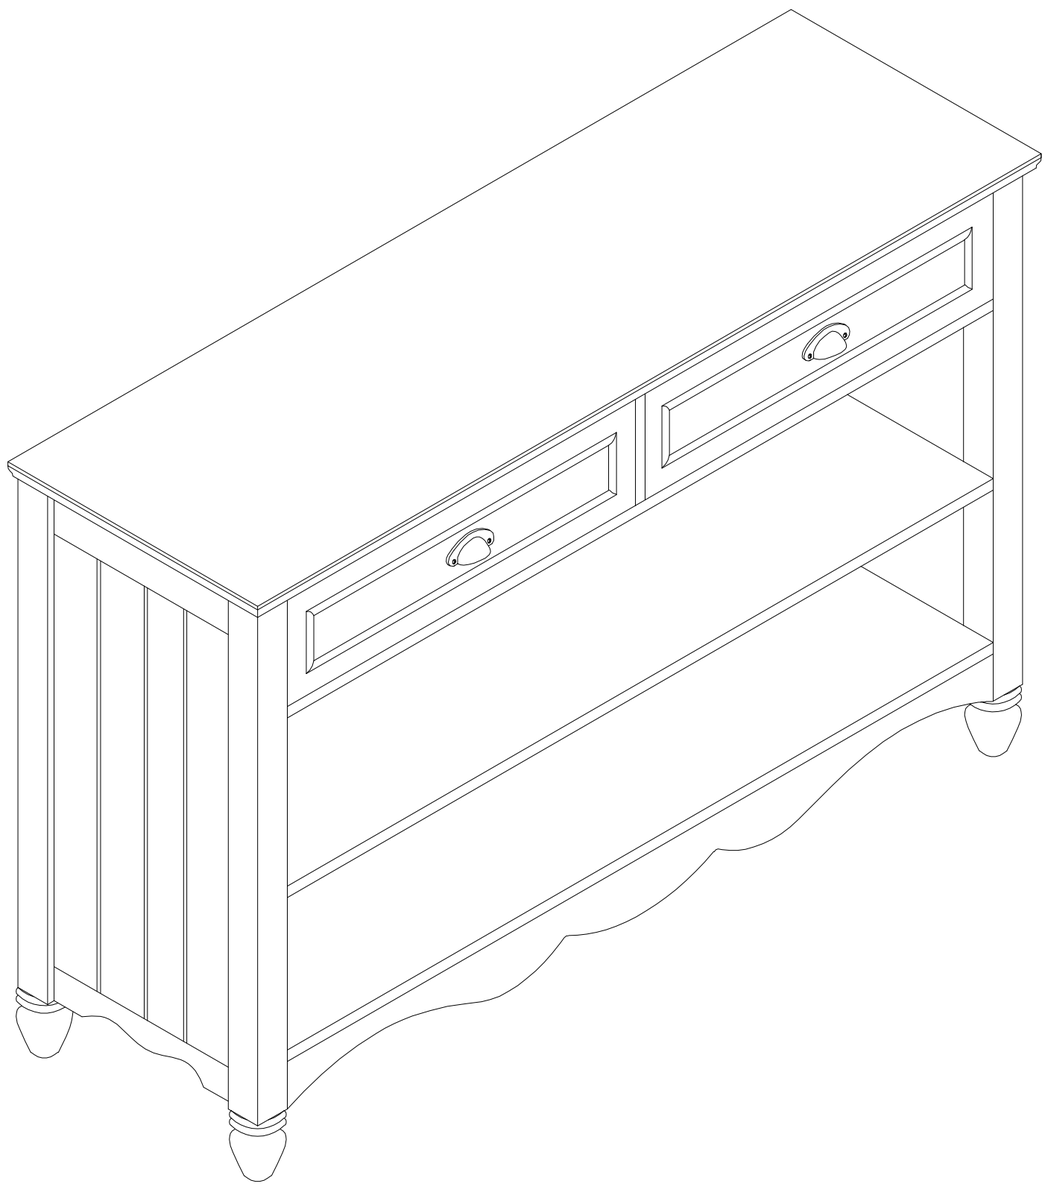

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

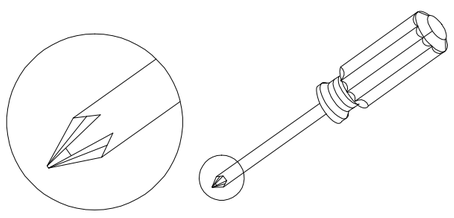

"+"Screw driver

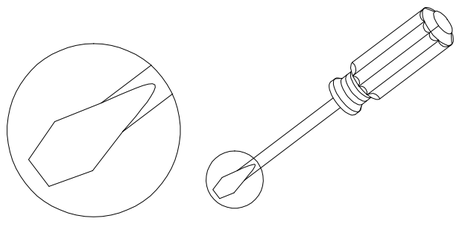

"-"Screw driver

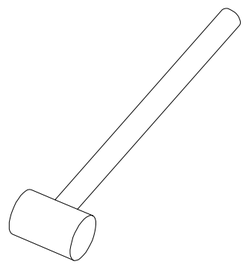

Rubber Mallet

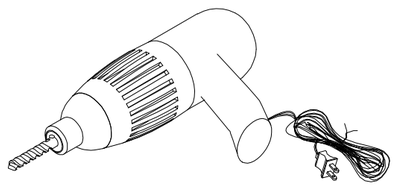

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.

(2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.

DO NOT USE HAMMER

(3) WIPE AWAY EXCESS GLUE.

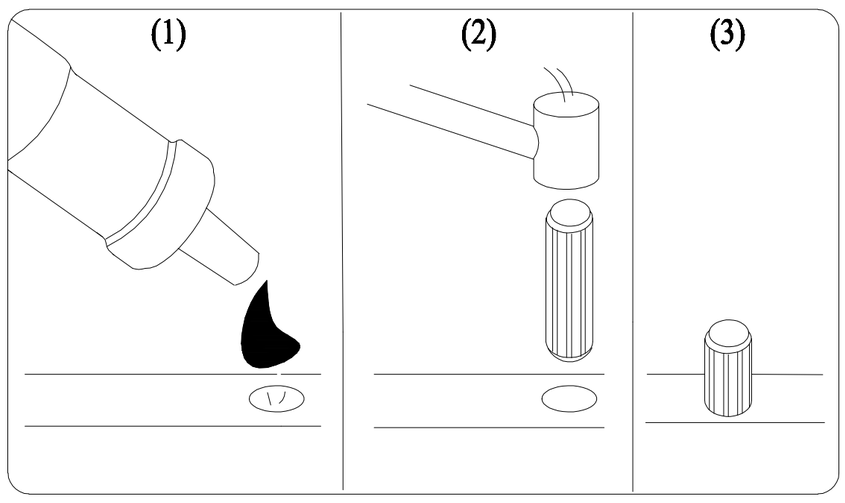

PARTS LIST

BOTTOM PANEL 1 PC 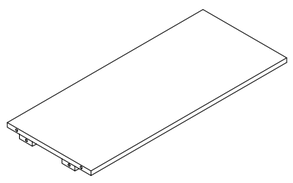 A	ACROSS PANEL 1 PC 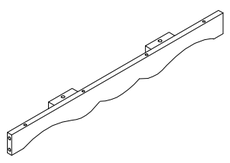 B	LEFT SIDE FRAME 1 PC 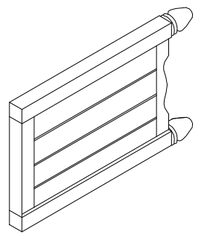 C	RIGHT SIDE FRAME 1 PC 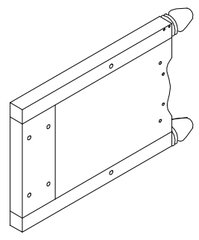 D
TABLE TOP 1 PC 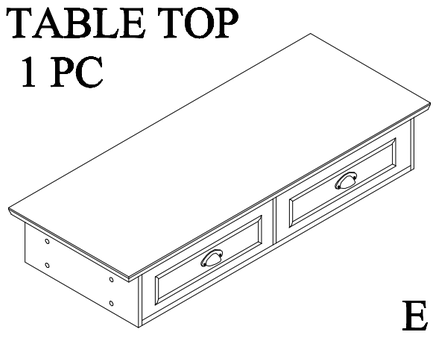 E	SHELF 1 PC 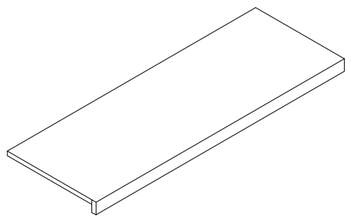 F	LEG 1 PC  G	

HARDWARE LIST

WOOD DOWEL 12 PCS (1)	ROUND HEAD BOLT FLAT WASHER 14 SETS  (2)	SHELF HOLDER 4 PCS  (3)	ALLEN KEY 1 PC  (4)	GLUE 1 PC 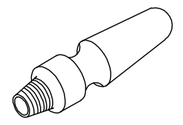 (5)

STEP 1: ASSEMBLE ACROSS PANEL (B) ON BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ATTACH ACROSS PANEL (B) AND BOTTOM PANEL (A) TOGETHER BY ALLEN KEY (4).

STEP 2: ASSEMBLE LEG (G)

- ASSEMBLE LEG (G) ON BOTTOM PANEL (A) AS SHOWN.

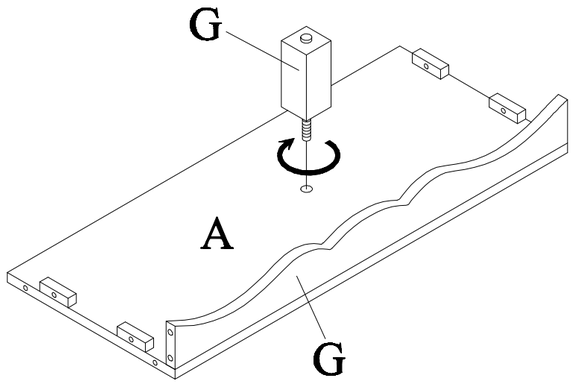

STEP 3: ASSEMBLE SIDE FRAME (C & D) AND TABLE TOP (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ASSEMBLE SIDE FRAME (C & D) AND BOTTOM (A) AND TABLE TOP (E) TOGETHER.

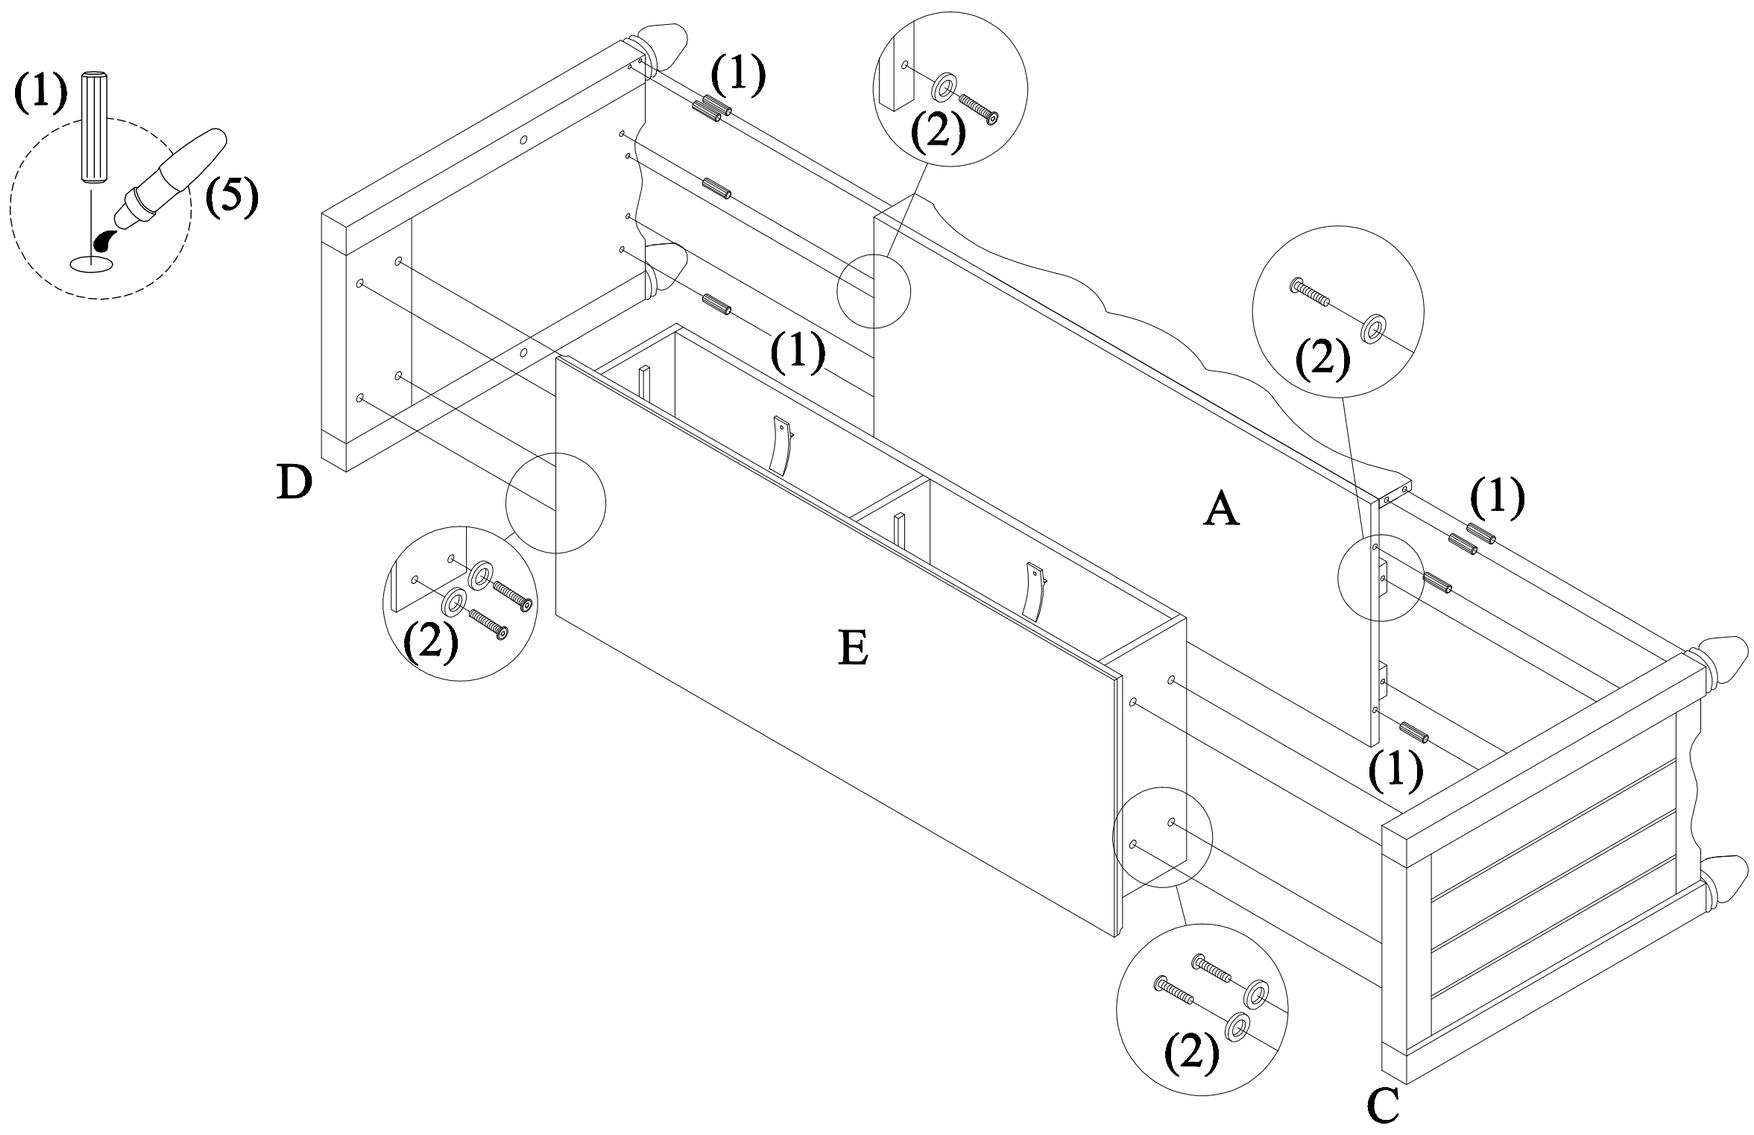

STEP 4: ASSEMBLE SHELF (F) AND PLACE DRAWER

- INSERT SHELF HOLDERS (3) INTO THE HORIZONTAL HOLES INSIDE OF SIDE FRAME (C & D) THEN PUT SHELF (F) ON THE SHELF HOLDERS.
- INSERT DRAWERS UNDER THE TABLE TOP (E) AS SHOWN.